

KOHLA

HAPPY TRANSPORTER CHILD CARRIER

**FULL
PACKAGE:**
rain cover
and body bag
included

PRODUCT INFORMATION

FEATURES

- NEW Development according to EN 13209-1: 2004 standard
- Nylon Dobby outer material
- Microfleece interior
- Aluminium frame with 2-hand locking system and KOHLA Safety Lock
- Carrier weight: 3,950g
- Length-adjustable back system (S-XL)
- Integrated sun/rain canopy
- Storage compartment with 12 litre volume
- Detachable body bag with 2 compartments
- Height-adjustable foot straps
- Kohla Ergo-Fit hip belt
- Adjustable chest strap
- Fully customisable child cockpit with 3-point buckle
- Side access with tunnel loops
- Rain cover included

⚠ SAFETY INFORMATION

- **Attention:** The carrier is for infants who are not yet able to hold themselves upright and sit independently. The maximum load capacity approx. 18 kg including luggage.
- The stretcher is self-standing. But please make sure it is level. Do not leave your child unattended in the carrier.
- Check before putting it on, that all straps are fastened correctly and that your child is in a comfortable sitting position. In general, ONLY transport the child with the seat belt fastened!
- Take breaks! Sitting for long periods can impair blood circulation, especially in the legs, and lead to frostbite or damage in cold temperatures.
- Provide suitable weather protection and clothing. Due to restricted movement, your child will freeze faster than you. Make sure your child is properly protected in the sun.

⚠ WARNINGS

- Only adults may carry children in the KOHLA child carrier.
- Before each use, check the carrier for damage and never use it if it is damaged.
- Make sure that all buckles are closed and tightened when using the child carrier.
- Take extra care when bending the carrier forwards and when picking it up and putting it down.
- The Kohla child carrier is only suitable for leisure activities, but not for sports such as cycling, skiing or similar.
- Failure to observe these warnings may result in serious injury or even death of the child.

THE CARRYING SYSTEM



Before you start adjusting, loosen all the straps.



Use the Velcro fastener to adjust the back system to the right length by sliding it up or down.

S 150 – 160 cm
M 160 – 170 cm
L 170 – 175 cm
XL 175 – 185 cm



Pick up the stretcher and first tighten the hip belt so that it sits snugly on your centre pelvic bone and the main weight is on your hips. Also tighten the connecting straps to the aluminium frame.




Also tighten the load straps (connecting the shoulder straps to the stretcher) at the top so that they all fit snugly.


THE CHILD SEAT




Next, tighten the shoulder straps.

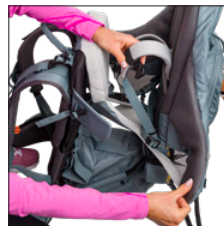


First open all the straps of the child seat, the side wings and loosen the Velcro fastener of the chest part of the child harness.

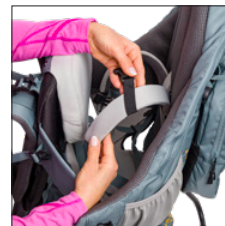


Place the child in the harness and adjust the chest part of the harness to the appropriate height.

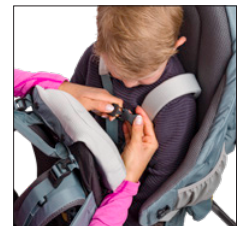

Now fasten the front fastener of the child harness.

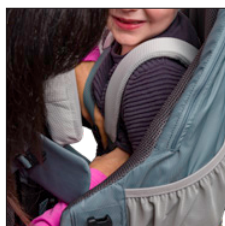


Then tighten the front fastening strap of the child harness.

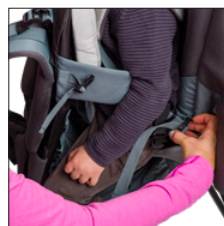

Next, tighten the side straps so that your child sits comfortably.




Then adjust the sternum strap to the appropriate height.

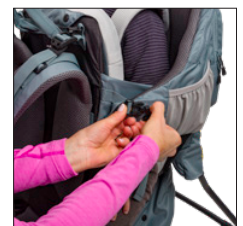


Insert the two parts of the side wing into each other, close the buckles and tighten them.


THE ROOF

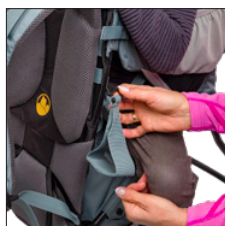

Adjust the footrests to the right height using the carabiner in the loop system. There are three adjustment options for the footrests.

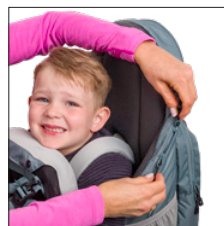

The sun and rain canopy is located in the back of the carrier and is concealed by a zip.

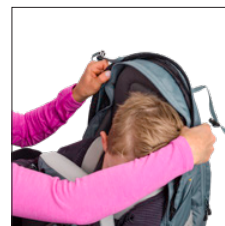

To unfold, open the zip and fold out the sun and rain canopy.



Fasten the buckles on the back to secure it.

KOHLA

HAPPY TRANSPORTER CHILD CARRIER

PICKING UP THE CHILD CARRIER



Hold the stretcher firmly by the main handle.



Slip one arm into the shoulder strap and take the weight on that side.



Now slip fully into the carrier and fasten the chest and waist straps.



Tighten all straps again.




Fold in the stand and you're ready to go.


PUTTING DOWN THE CHILD CARRIER



First unfold the stand bar and then open the hip and chest straps.

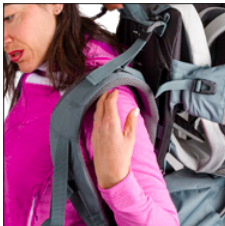

Unthread one arm from the shoulder strap and shift the weight of the stretcher to the other side.

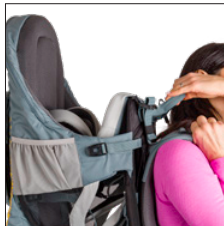

To set it down, pick up the main handle again.



Place the stretcher carefully on level ground.



Note: If you are traveling alone, unfold the grab rail by hand. If you cannot reach the grab rail yourself, ask another person for help.

THE BAGS



The lower pannier is secured at the side with press studs, at the top with Velcro and at the bottom with a buckle to ensure optimum weight distribution. To remove, open all buckles, pack the bag and then reattach it to the carrier.



The top bag is fastened with three buckles and can therefore be easily removed. The carrying handle and shoulder strap make it very handy. After use, stow the strap in the opening at the back and reattach the bag to the stretcher using the buckles.



There are additional open mesh pockets on the side wings for stowing small items.



There is also a zippered pocket on the right side of the hip belt for keys, cell phone and small items.

THE RAIN COVER



The rain cover is included in the scope of delivery and can be quickly and easily stretched over the child carrier if required.